
If your kit came with a black wire, simply put electrical tape over the end and disregard it.

Attach the Posi-Tap to the JB4's power wire (2nd image) then attach the JB4 Connect Kit's red wire.

Posi-Tap™
TAP CONNECTOR

- TAPS WIRES WITHOUT CUTTING
- TOTAL WIRE INTEGRITY IS MAINTAINED
- INSTALLS IN SECONDS BY HAND
- NO CRIMPING OR TOOLS REQUIRED
- REUSABLE OR PERMANENT
- LESS RESISTANCE
- VIBRATION PROOF
- FULLY INSULATED


POWERS UP TO (4) LEADS AT ONCE!

QUICK & EASY

- 1** Insert Hot Wire
- 2** Tighten
- 3** Strip Leads
- 4** Insert & Tighten

NO CRIMPING

NO TOOLS NEEDED

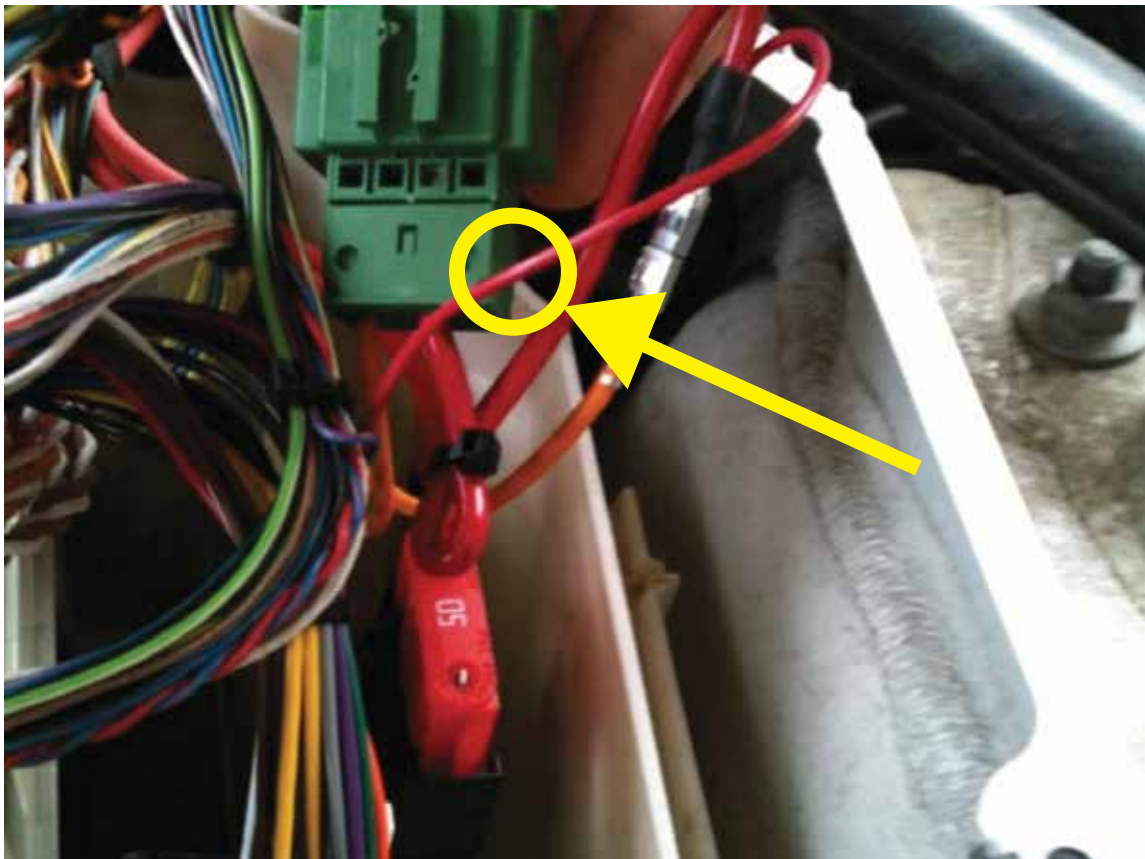

Plug the Connect Kit's DB9 connector into the JB4 and ensure it is screwed in.